



GOORUI REGENERATIVE BLOWERS ELECTRIC CONNECTIONS

Important. Make sure all wires are tightened down on the terminals, and blower is properly grounded. Make sure to use a circuit breaker protection according to the size of the blower. Make sure rotation is correct and air flowing in the direction of the arrow on the side of the blower. Do not block air flow, refer to performance curve for Minimum air flow requirements.


Models: GHBH XXX 12 XXX 220V 1 Phase (Phase to Phase)

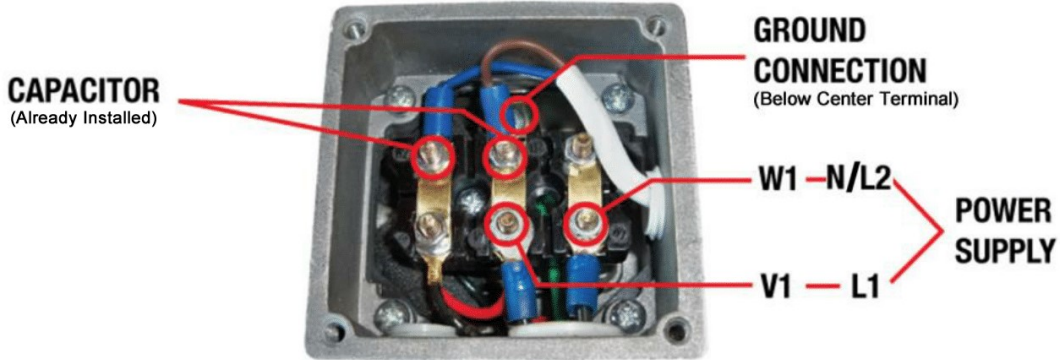

Models: GHBH XXX 34 XXX 220V-480V 3 Phase
GHBG XXX 34 XXX 220V-480V 3 Phase

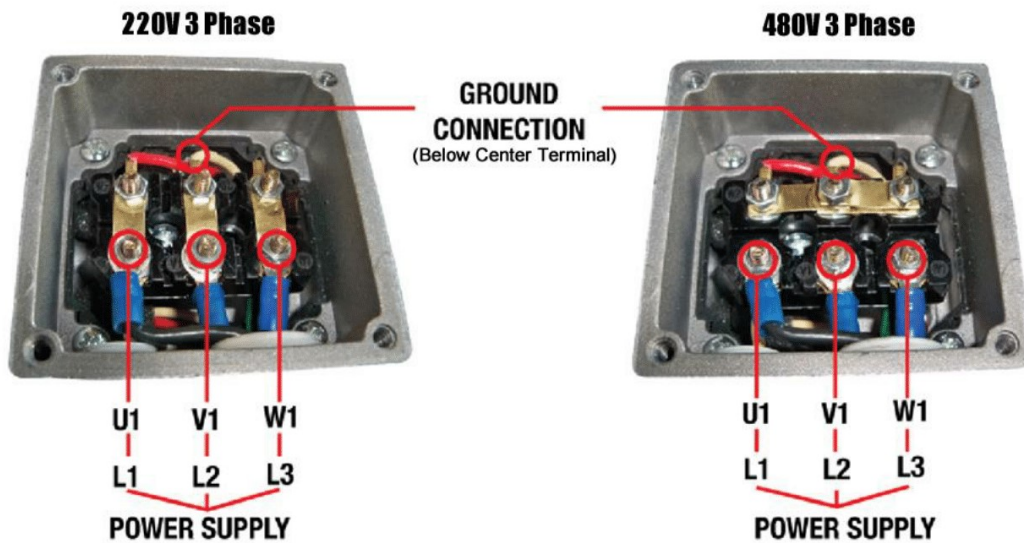

Models: GHBH XXX 36 XXX 480V-720V 3 Phase
GHBG XXX 36 XXX 480V-720V 3 Phase

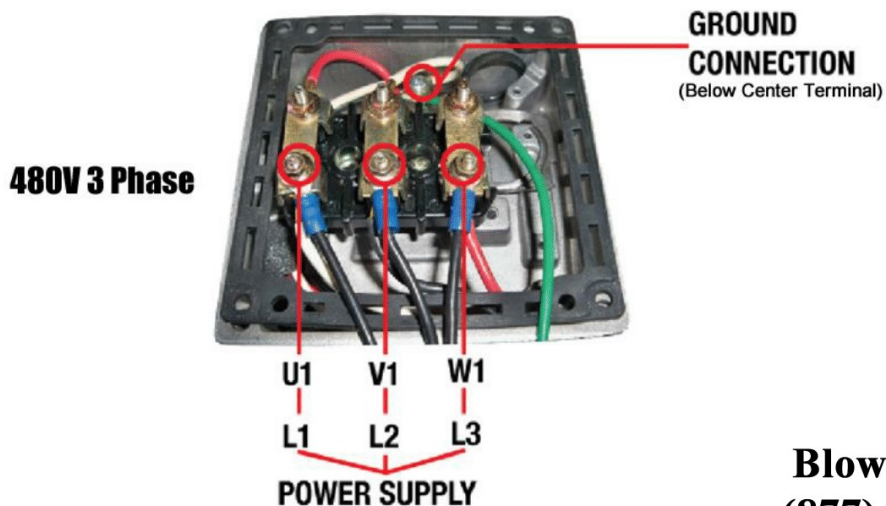

Blowers Depot
(877) 855 - 4558